


## IMPORTANT INSTALLATION INSTRUCTIONS FOR SMART2LOCK


### BEFORE INSTALLATION

1. **Check the frame:** The frame must not bulge in the vicinity of the striking plate. This can be checked using a long spirit level or straightedge.
2. **Checking the lockable grip:** Check whether the lock opens and closes before installation. **ATTENTION! The square spindle must not be inserted into the handle for this.**
3. **Check the latch projection at the lock:** 10 mm as standard, unchecked locks often only have 8 mm.

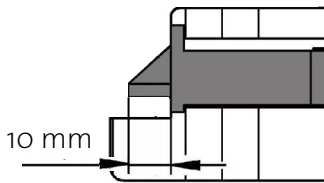


Only valid for ONE door handles:

Adjust substructure so that it is parallel with the handle, if it is incorrectly adjusted.

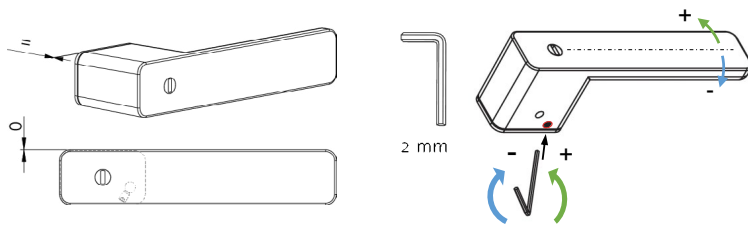


### INSTALLATION VIDEOS

Step by step guide in suitable installation video:

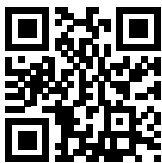


ONE door handles

[>> VIDEO](#)

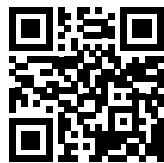


Piatta S

[>> VIDEO](#)

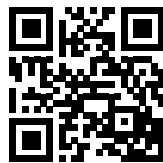

Clip-on system

[>> VIDEO](#)

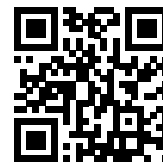


Screw-on system


[>> VIDEO](#)

## DURING INSTALLATION

1. Drill support cams to 7 mm horizontally (not bigger)  
For this purpose, we recommend the GRIFFWERK drilling template

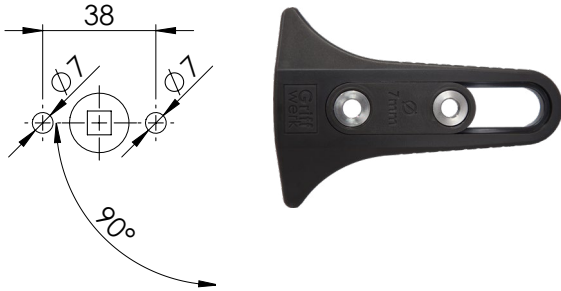

2. Rebate gap max. 3.5 mm (door adjustment)

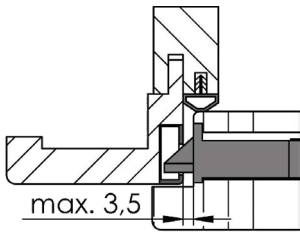

3. Tighten grub screws properly

