

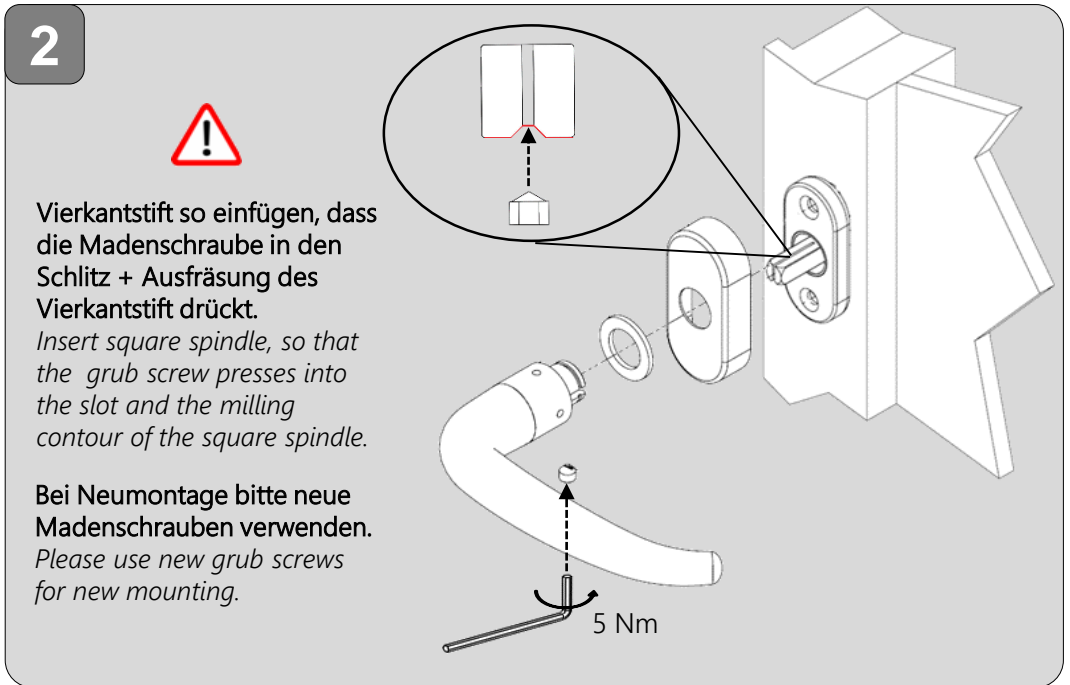
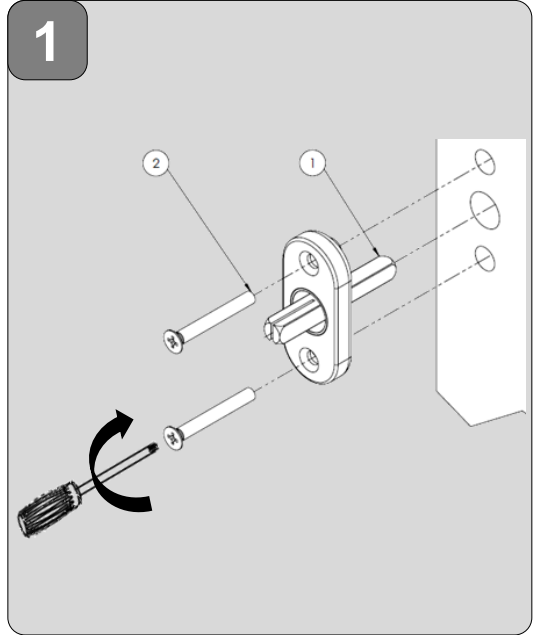
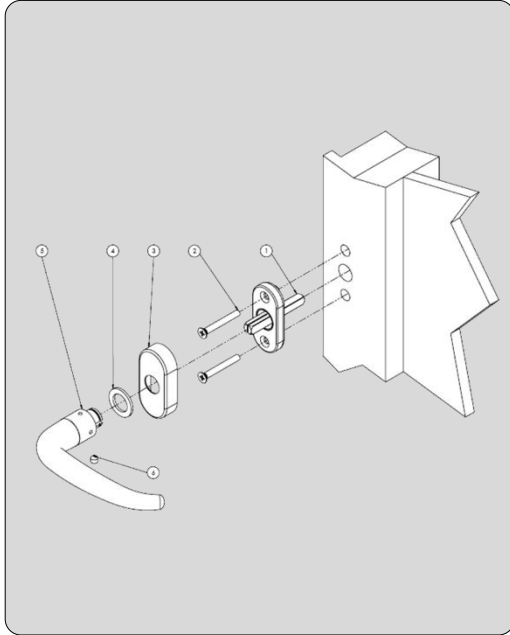
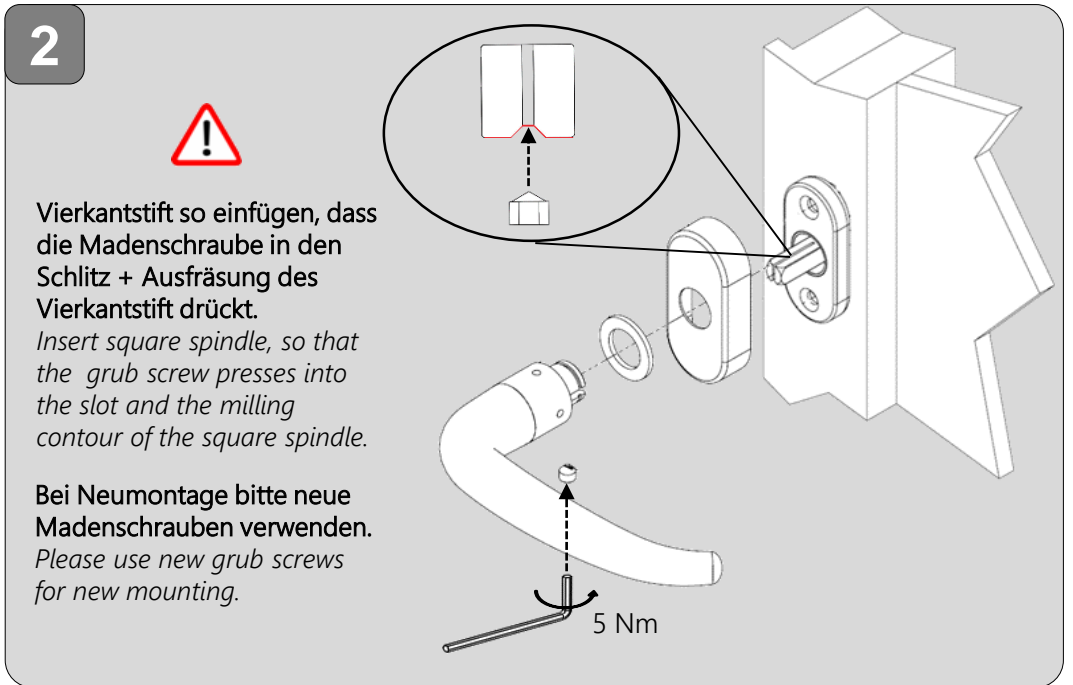


MONTAGEANLEITUNG FENSTEROLIVE MOUNTING INSTRUCTIONS WINDOW HANDLE

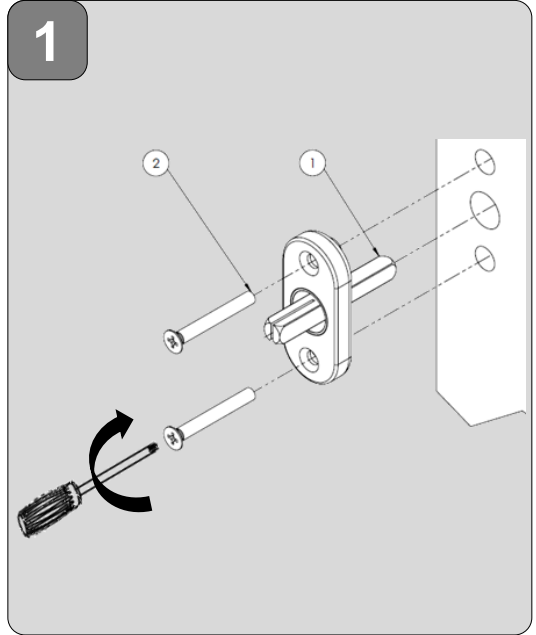

0 2223 0000

MONTAGEANLEITUNG FENSTEROLIVE MOUNTING INSTRUCTIONS WINDOW HANDLE

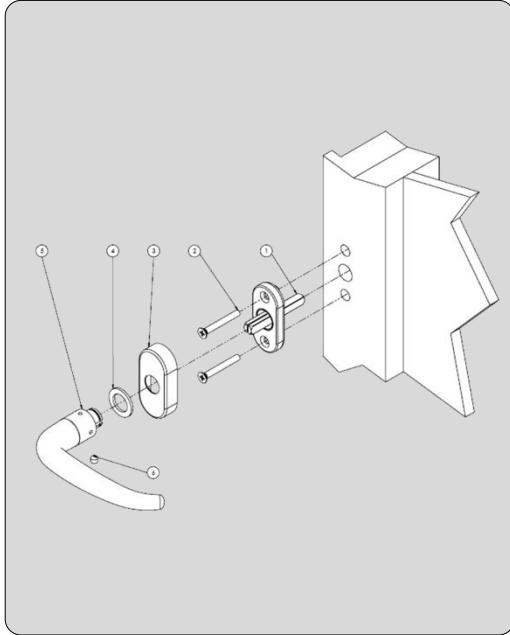

022230000